

A218
Video Projector
Computer
DVD/VCR

Power-On the computer and DVD/VCR (if you intend to use either or both) before turning on the Video Projector (VP).

Power-On the VP with the “Power” button on the VP remote control.

To view the computer through the VP, open the cover (below the “Esc” button) on the VP remote and press the “Comp1” button.

To view the DVD/VCR through the VP, push the “Video” button on the VP remote.

To adjust the program volume for the Computer or DVD/VCR, open the cover on the VP remote and push the “- Volume +” button while pointing it at the VP.

The picture on the screen can be temporarily blanked-out by pushing the “AV Mute” button on the VP remote. Push it again to put the image back on screen.

To turn off the VP, press the “Power” button on the VP remote. A confirmation message will appear on screen. Press the “Power” button again.

Trouble?

Call the Help Desk at 7419