

B312

Video Projector Computer

Power-On the computer before turning on the Video Projector (VP).

Power-On the VP with the orange “Power” button on the Epson VP remote control.

To view the computer through the VP, push the “Source Search” button on the VP remote if necessary.

The picture on the screen can be temporarily blanked-out by pushing the “AV Mute” button on the VP remote. Push it again to put the image back on screen.

The computer volume can be controlled with the “Vol-“ and “Vol+” buttons on the remote control. Aim it toward the projector.

To turn off the VP, press the orange “Power” button on the VP remote. A confirmation message will appear on screen. Press the “Power” button again.

Trouble?

Call the Help Desk at 7419