

B333

Video Projector Computer/VCR/Document Camera

Power-On the computer, VCR, and the Elmo document camera (if you intend to use any or all of them) before turning on the Video Projector (VP).

Power-On the VP with the “Power” button on the VP remote control.

To view the computer through the VP, push the “Comp 1” button on the VP remote. It’s under the flip-open door on the remote.

To view the Elmo document camera through the VP, push the “Video” button on the VP remote.

To view the VCR through the VP, push the “AV1” button on the Elmo document camera. Keep the VP in “Video” mode.

To view the Elmo or the VCR on the TV monitor, press the “Video Select” button on the monitor (under the flip-down door) until the monitor goes to the “Video 2” mode.

The audio for the VCR runs through the TOA amp on the shelf below. It must be turned on. The VCR is on “Input 5”. The sound level can be adjusted with the volume control on the wall to the left of the screen .

The audio for the computer runs through the computer speakers behind the computer monitor.

The picture on the screen can be temporarily blanked-out by pushing the “AV Mute” button on the VP remote. Push it again to put the image back on screen.

To turn off the VP, press the “Power” button on the VP remote. A confirmation message will appear on screen. Press the “Power” button again.

Trouble?

Randy x7393 (7:00a – 3:00p)