

B403

Video Projector
Computer
Combo DVD/VCR
Mounted Speakers

Power-On the computer and the DVD/VCR before turning on the Video Projector.

Power-On the Video Projector (VP) with the VP remote control's "Power" button.

To view the computer through the VP, open the cover (below the "Esc" button) on the VP remote and press the "Comp2/BNC" button.

To view the DVD/VCR through the VP, push the "Video" button on the VP remote.

The Computer also has a DVD-ROM drive that can be used to play DVD's. The application "Power DVD" should come up automatically when a DVD is loaded.

The audio for the DVD/VCR and Computer runs through the black amp on top of the DVD/ VCR. It must be turned on. You'll see a red light. The "Line" and "Aux/CD" buttons should be in the pushed in position. The sound level can be adjusted with the round volume control.

The picture on the screen can be temporarily blanked-out by pushing the "AV Mute" button on the VP remote. Push it again to put the image back on screen.

To turn off the VP, press the "Power" button on the VP remote. A confirmation message will appear on screen. Press the "Power" button again.

Trouble?

Call the Help Desk at 7419