

B404
Video Projector
Computer/DVD-ROM
DVD/VCR Deck

Power-On the computer and DVD/VCR before turning on the Video Projector (VP).

Power-On the VP with the “ON” button on the VP remote control. Aim the remote at the VP.

To view the computer through the VP, push the “INPUT 1” button on the VP remote aiming it at the VP.

To view DVD’s or a video tape through the VP, push the “INPUT 3” button on the VP remote aimed at the VP, and load the media in the proper slot in the combo DVD/VCR deck. Use the remote for the combo deck to control program functions while aiming that remote at the combo deck.

DVD’s can also be viewed through the VP using the DVD-ROM drive in the computer, however, it’s best to use the combo deck for watching DVD’s. Select the “Power DVD” application on the computer desktop to run it, if it does not start automatically after inserting the DVD. Use the mouse to run the DVD functions on the application control panel displayed.

The audio for the DVD/VCR and the computer runs through the black amp under the computer monitor. The amp must be turned on. You’ll see a red light when it’s on. The sound level can be adjusted with the round volume control.

The picture on the screen can be temporarily blanked-out by pushing the “BLACK SCREEN” button on the VP remote aimed at the VP. Push it again to put the image back on screen.

To turn off the VP, press the red “OFF” button on the VP remote. A confirmation message will appear on screen. Press the “OFF” button again.

Trouble?

Call the Help Desk at 7419