

B413 Temp

Video Projector
Computer
Combo DVD/VCR
Mounted Speakers

Power-On the computer and the DVD/VCR before turning on the Video Projector.

The remote is missing, so until it's replaced you'll have to Power-On the Video Projector (VP) manually by pushing the **GREEN I/O** button on the projector itself.

To view the DVD/VCR through the VP, push the "INPUT" button on the VP until it cycles to the desired source.

To view the computer through the VP, push the "INPUT" button on the VP until it cycles to the computer.

The Computer also has a DVD-ROM drive that can be used to play DVD's. The application "Power DVD" should come up automatically when a DVD is loaded.

The audio for the DVD/VCR and Computer runs directly to the speakers on each side of the projection screen. The volume for them can be adjusted with the "Volume + -" buttons on the VP.

The picture on the screen can be temporarily blanked-out by pushing the "AV Mute" button on the VP. Push it again to put the image back on screen.

To turn off the VP, press the "**GREEN**" button on the VP itself. A confirmation message will appear on screen. Press the "**GREEN**" button again.

Trouble ?

Call the Help Desk at 7419