

B413

Video Projector
Computer
Combo DVD/VCR
Mounted Speakers

Power-On the computer and the DVD/VCR before turning on the Video Projector. Power-On the Video Projector (VP) with the VP remote control's **GREEN** button. Make sure the "COMMAND" switch is in the ON position on the VP remote.

To view the computer through the VP, push the "INPUT" button on the VP remote until it cycles to the computer.

The Computer also has a DVD-ROM drive that can be used to play DVD's. The application "Power DVD" should come up automatically when a DVD is loaded.

The DVD/VCR under the mounted TV can be used to view DVD's or VHS tapes on the TV or the video projector, or on both at the same time.

To view the DVD/VCR through the VP, push the "INPUT" button on the VP remote until it cycles to "VIDEO" as the source.

The audio for the DVD/VCR and Computer runs directly to the speakers on each side of the projection screen. The volume for them can be adjusted with the "Volume + -" buttons on the VP remote.

The picture on the screen can be temporarily blanked-out by pushing the "AV Mute" button on the VP remote. Push it again to put the image back on screen.

To turn off the VP, press the "**GREEN**" button on the VP remote. A confirmation message will appear on screen. Press the "**GREEN**" button again.

Trouble?

Call the Help Desk at 7419