

B418

Video Projector
Computer/DVD-ROM
Combo DVD/VCR

Power-On the computer before turning on the Video Projector (VP).

Power-On the VP with the “On” button on the VP remote control.

To view the computer through the VP, push the “Input 1” button on the VP remote.

The volume control for the Computer/DVD-Rom is on the VP remote. Point it toward the VP.

DVD’s can be played by using the DVD-ROM drive in the computer (but are better viewed by using the combo DVD/VHS player). Select the “Power DVD” application on the computer desktop to run it, if it does not start automatically after inserting the DVD.

To view a video tape or DVD, use the combo player near the computer. Use the combo deck’s remote to select VHS or DVD and to operate the functions of the player. Use the VP remote to select the player as the source by pushing the “Input 4” button.

The picture on the screen can be temporarily blanked-out by pushing the “AV Mute” button on the VP remote. Push it again to put the image back on screen.

To turn off the VP, press the “Stand By” button on the VP remote. A confirmation message will appear on screen. Press the “Stand By” button again.

Trouble ?

Call the Help Desk at 7419