

B440

Computer

DVD/VCR Combo Deck

TV/DVD/VCR Combo

The TV/DVD/VCR combo unit mounted on the front wall can be used anytime for stand-alone viewing of your programs. Power-On TV with the power button on the TV or with the Panasonic remote.

You can use the volume control on the TV or its remote for listening from the speakers on the TV, or you can listen and adjust the volume through the ceiling speakers (for larger groups) with the "TV/AUX" black dial control on the wall just to the left of the whiteboard.

If you prefer to view your program on the large screen you'll need to turn on the ceiling mounted video projector (VP) and use the computer or DVD/VCR deck on the table in the front left corner of the room. Before doing so, please turn on any of the equipment you intend to use **before** powering up the VP. **Use the VP remote or the wall switch (at the left end of the whiteboard) to turn the projector on or off and select the source for viewing.**

The large screen must be lowered (and raised) with the "Projection Screen" up and down buttons on the stainless steel control panel on the wall to the left of the whiteboard. This panel also has buttons for turning the room lights on and off. You can turn off the florescent lights and use the dimmer slider switches to use the incandescent lights instead. The "ON/TAKE CONTROL" button will need to be pushed to use some of the functions on this control panel.

To use the computer you'll need to log-on with your Username and Password. The computer has the standard college load of applications. You'll need to contact the Academic Computing Center for any computer or software application problems. The computer can be used to view DVD's if desired, but the DVD/VCR deck on the table next to the computer will show much better picture quality. **To view the computer through the VP you'll need to use the Sharp VP remote or the wall switch. Aim the remote toward the VP and press the "INPUT 1" button.**

To view a video tape or DVD through the VP, press the "INPUT 3" button on the VP remote aimed at the VP, or use the wall switch. The DVD/VCR deck also has a remote that can be used to turn it on and off, as well as control the functions of the program you're playing. It's a Zenith remote that needs to be aimed at the DVD/VCR on the tabletop.

The "TV/AUX" black dial control on the wall just to the left of the whiteboard is needed to adjust any sound coming from the DVD/VCR or the Computer. If you don't hear any sound from the ceiling speakers you'll need to check the black amp in the first cabinet on the front right wall of the room (just past the closet door near the room entrance). Turn on the "Power" button of the amp if necessary, but don't touch any of the other dials.

Trouble?

Call the Help Desk at 7419