

## **C220**

Video Projector  
Computer  
DVD/VCR

Power-On the computer and VCR (if you intend to use either or both) before turning on the Video Projector (VP).

Power-On the VP with the red **Power** button on the VP remote control.

To view the computer through the VP, push the "Comp2/YCbCr" button on the VP remote.

To view the DVD/VCR through the VP, push the "Video" button on the VP remote.

The audio for the DVD/VCR and the Computer runs through the black amp on top of the DVD/VCR. It must be turned on and the "Line" button must be in the "In" position. You'll see a red light. The sound level can be adjusted with the round volume control.

The picture on the screen can be temporarily blanked-out by pushing the "AV Mute" button on the VP remote. Push it again to put the image back on screen.

To turn off the VP, press the red **Power** button on the VP remote. A confirmation message will appear on screen. Press the **Power** button again.

## **Trouble?**

**Call the Help Desk at x 7419**