

D216

Video Projector Control System

The Crestron Touchscreen Panel on the desktop is used to control most of the equipment functions. Touch the panel anywhere on its surface to activate the screen. The default welcome screen is a yellow and blue FLCC logo. Touch it.

To power-up the Video Projector (VP), firmly press the **green** "Projector Power On" button for at least one second. The button should turn white and you'll see the projector light (behind the widow at the top of the room) come on within a few seconds.

From the Main Menu you can select what you want to appear on the large wall screen behind you. Each item has its own control menu. Select what you want projected. You can preview your selection before sending it to the projector by touching the "Preview" button on the touchscreen. Touch the "Send to Projector" button to view it on the large wall screen.

The computer (under the desktop) may need to be turned on with its own power button. Make sure the multiple outlet strip on the floor near the desk is also switched on. You'll need to Log-On to the computer to use the various applications. Push the "Send Desktop to Projector" button on touchscreen to view it.

A Laptop computer can also be used and routed to the VP by attaching it to the appropriate jack on a connection box located on the right side end of the desk. To view it on the VP, touch the "Send Laptop to Projector" on the touchscreen.

The Document Camera on the desktop must be turned on with it's own power switch, if you intend to use it. Push the "Send Document Camera to Projector" button on touchscreen to view it on wall screen.

All other equipment can be found on the left side under the desktop. The VCR and DVD player are normally left on.

CD's can be played through the DVD player, or the computer.

The VCR must be on to access Cable TV. Cable TV has it's own menu screen with the appropriate push-button controls.

The picture on the wall-screen can be temporarily blanked-out by pushing the "Video Mute" button on the touch panel. Push the "Send to Projector" button to put the image back on the wall screen.

(Over)

The “Mute” buttons on the audio volume control sliders will be flashing before you first use them. The audio for a microphone, the VCR, DVD and the computer are all adjusted with the arrow up/down controls on the touchscreen. Use the “Mic Volume” button for your lavalier mike, and the “Program Volume” button for all other equipment.

The projection screen can be raised or lowered using the appropriate button on the Crestron touchscreen. If the projection screen does not respond, there’s a manual push-button control on the wall to the left of the screen.

The lights for the room are controlled by the light switches on the side-wall and projection-screen wall.

To shut down the system, push the **Red** “Projector Power Off” button on the Main Menu screen. It will turn the VP off and return the touchscreen to the default FLCC welcome screen.

Log-Off the computer and shut the computer system down if you’d like. It’s okay to leave it on.

Turn off the Document Camera if you were using it.

Do not turn off any other equipment.

Trouble?

Call the Help Desk at 7419