

D223

Video Projector

Computer/VCR/Document Camera

Power-On the computer, VCR, and the Canon document camera (if you intend to use any or all of them) before turning on the Video Projector (VP).

Power-On the VP with the red “Power” button on the VP remote control.

To view the computer through the VP, push the “Comp2/YCbCr” button on the VP remote.

To view the VCR through the VP, push the “Video” button on the VP remote.

Please note that the computer now has a DVD-ROM drive installed. It can play DVD's as well as CD's. An application called “Power DVD” should automatically open when you insert a DVD. As the DVD is routed through the computer, you do not have to change the VP to any other function. Leave it in the “Comp2/YCbCr” mode. Use “Media Player” to play audio CD's.

The audio for the VCR, DVD, and the computer runs through the black amp on top of the VCR. It must be turned on. You'll see a red light. The sound level can be adjusted with the round volume control. Do not mess with any other buttons.

To view the Canon document Camera through the VP, push the “S-Video” button on the VP remote.

The picture on the screen can be temporarily blanked-out by pushing the “AV Mute” button on the VP remote. Push it again to put the image back on screen.

To turn off the VP, press the red “Power” button on the VP remote. A confirmation message will appear on screen. Press the “Power” button again.

Trouble?

Call the Help Desk at 7419