

O 410
Video Projector
Computer/DVD, VCR

Power-On the computer and VCR (if you intend to use either or both) before turning on the Video Projector (VP).

Power-On the VP with the red "Power" button on the VP remote control.

To view the computer through the VP, push the "Source" button on the VP remote until the computer image appears on the screen.

Make all "Source" selections slowly, as the VP needs several seconds to cycle through each source change.

To view DVD's through the VP, load the DVD into the DVD-ROM drive in the computer. Leave the source selection in the computer mode, or push the "Source" button until the VP displays the computer image. Select the "Power DVD" application on the computer desktop to run the DVD, if it does not start automatically after being inserted.

To view the VCR through the VP, push the "Source" button on the VP remote until the video image appears on the screen. The audio for the VCR (and the computer) runs through the black amp on the desk top . It must be turned on. You'll see a red light. The sound level can be adjusted with the round volume control.

The picture on the screen can be temporarily blanked-out by pushing the "Blank" button on the VP remote. Push it again to put the image back on screen.

To turn off the VP, press the red "Power" button on the VP remote.

Trouble?

Call the Help Desk at 7419

